



2. Move up the original pillow 10 cm, And then install a box-shaped and U-shaped fixed accessories, After adjust the U-shaped parts

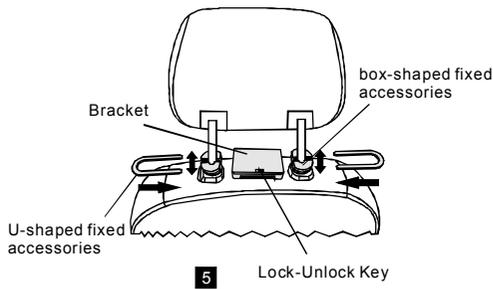

3. Open the lock-unlock key then install the monitor. Then, Close the lock-unlock key.

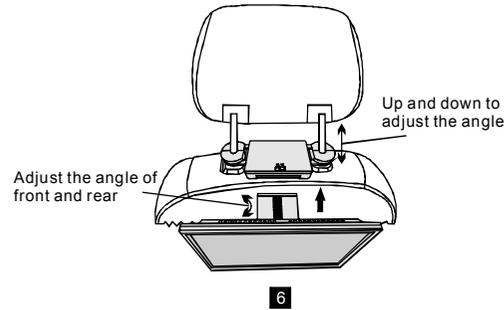

4. Adjust the angle of monitor

Specifications

Since the product features upgrade , Maybe the product specifications are subject to changed without notice

Model		7"	9"	10.1"
Dimensions (W* H* D)	Including the base	178*150.2*91.5(mm)	219.5*188.7*94(mm)	249.5*220*94(mm)
	Without the base	178*118.7*23(mm)	219.5*143.2*25.5(mm)	249.5*174.5*26(mm)
Operating Voltage		DC-12V		
Overall power consumption		≤8W		≤8.3W
Passive standby power		≤0.18W		
The minimum size of viewable image diagona		180mm	227mm	254mm
Contrast		≥200:1		
viewing angle	Level	≥70°		≥60°
	Vertical	≥60°		≥55°
The inherent resolution		800*480□		1024*600□

USER'S MANUAL



LCD SCREEN

Attention

- Do not use your fingernails or sharp object to press, rub, or hit the surface, As this may scratch the screen and cause the image distortion
- Do not use wax, benzene, alcohol, thinners, insecticides, air fresheners, lubricants and any other chemicals, as these chemicals may damage the glossy screen and cause discoloration
- Do not use liquid spray to the surface, If the TV inside of water, May cause the fire and electric shock or malfunction

Abandon Process

- Do not discard together with the normal household waste
- Handling the products in accordance with rule of functional department

Before operating this set, please read this instruction completely.




! Warn:

Please do not place the equipment and the remote control in the following conditions.

- Exposure to the position of direct sunlight
- Bathrooms or other position with high humidity
- Nearby any heat source
- The place where is tend to accumulate dust


Do not let the product subject to strongly impact, Or, Allow any objects dropped on the product. And, Do not let anything fall on the screen, Could result in personal injury or damage to the product.

Appearance and function

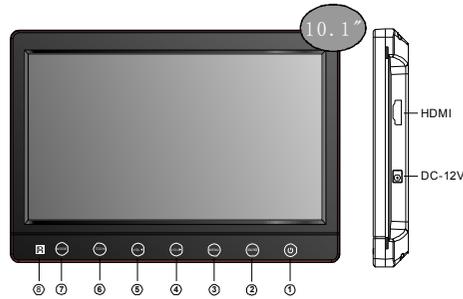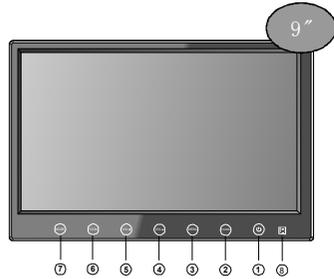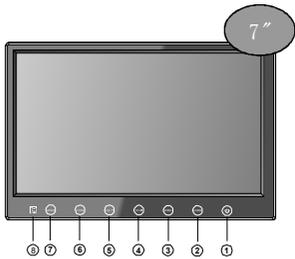


- ① Power switch
- ② AV/HDMI switch
- ③ Analog menu
- ④ Volume increases
- ⑤ Volume down
- ⑥ Tcon
- ⑦ 16:9/4:3 switch
- ⑧ Remote control receiving window

The way of wiring

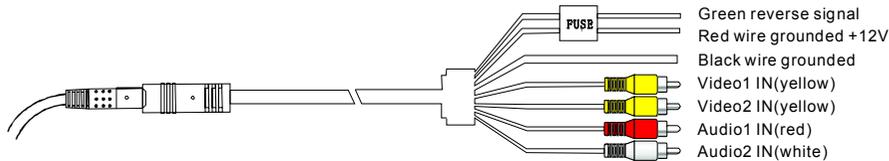


Remoter Function

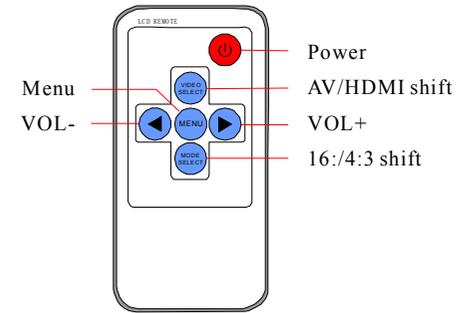

Installing


Vertical installation

1. Display screen and base installing
Insert the prominent oval metal of base into the card slot from the metal clip gap of display screen back

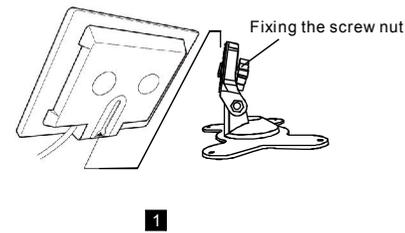

2. Base installing details

- ① Front&back / left&right to adjust the display screen to the proper position, And screw the nut fastening
- ② Cleaning the dust and grease wipe from installing countertop surface with a clean rag
- ③ Remove the protective paper of sided adhesive from the base bottom, Pasting base on the installing countertops and press firmly tight.

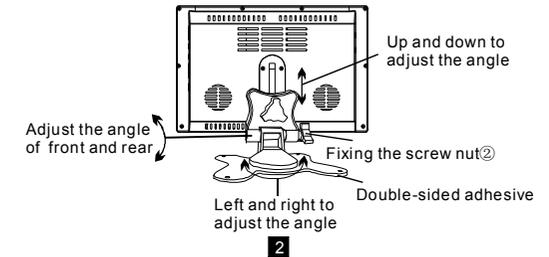

3. Collating the connected relevant cables and fixing them

Remark: Cables can not be pulled too tightly, Otherwise, Easy to make the display screen tilting or falling

Hanging installation

1. Unscrew the four screws, remove the back of the parts, and then install the headrest bracket

